


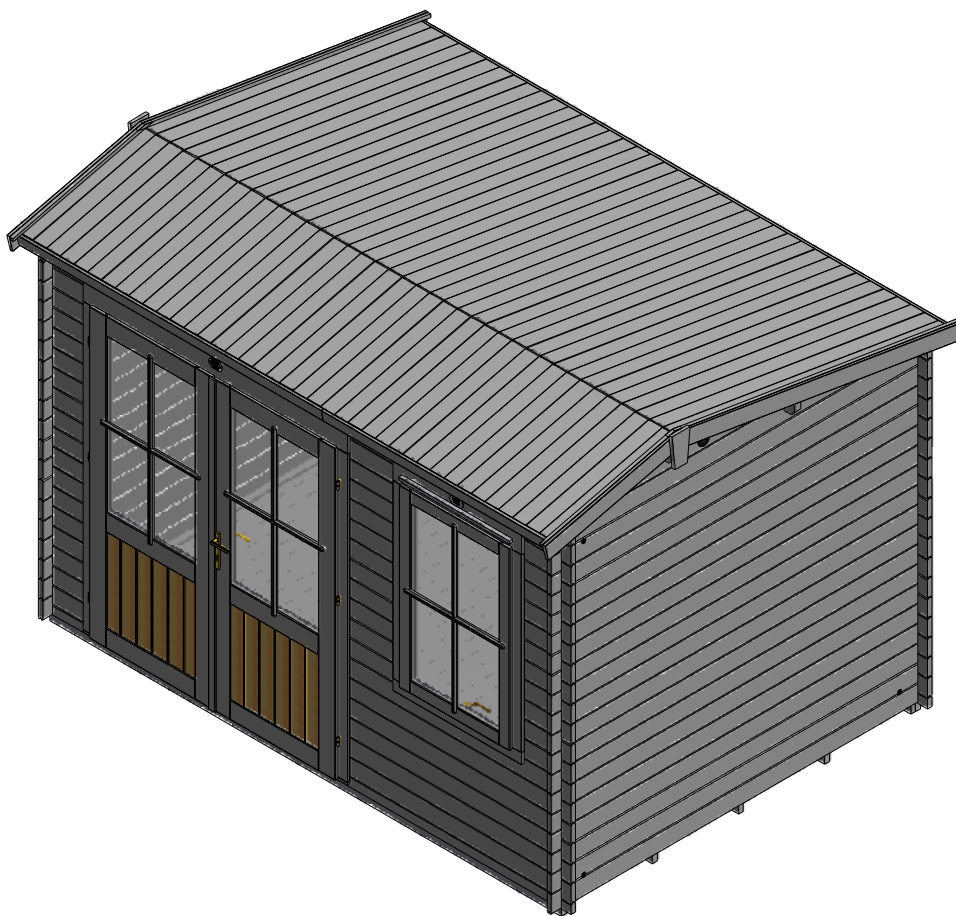

INSTALLATION MANUAL

Carsare 35/25 (28 mm)

Log Cabin



Important!

If you have bought shingles, please use our provided shingle installation instructions.



Unique Cabin Reference Number

www.dunsterhouse.co.uk

Carsare 35/25 (28mm) - Components


EN.3360

7 of required
Bearer
Pressure treated

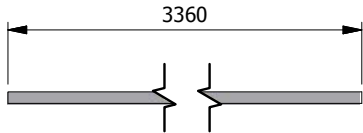



A28.310.70.0.0

28 of required
Wall log





A28.410.0.0.0

11 of required
Wall log





A28.1510.70.0.0

6 of required
Wall Log





A28.2500.70.70.0

36 of required
Wall log




A28.3500.70.70.0

19 of required
Wall Log
(inc. one spare)

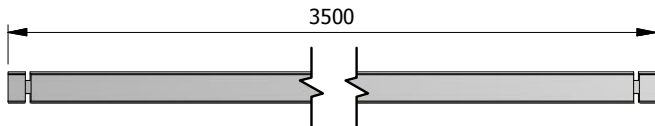



B28.310.70.0.0

1 of required
Bottom wall log





B28.1510.70.0.0

1 of required
Bottom Wall log



B28.3500.70.70.0



1 of required
Bottom wall log

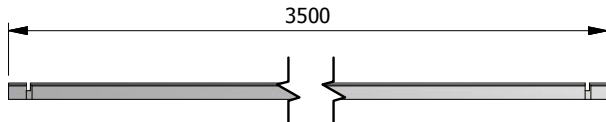

Carsare 35/25 (28mm) - Components



HN.2000

4 of required
Eaves Edging
Required to be cut on site





J.1960.A

4 of required
Storm Brace





J.2000

10 of required
Floor trims &
Roof Edge Reinforcements
Required to be cut on site





N.2000

6 of required
Apex trims and wind braces
Required to be cut on site





P45.3500.65.65.0

1 of required
Purlin

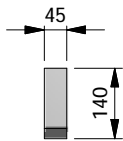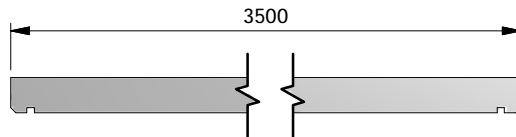



P45.8RL.3500.65.65.0

1 of required
Purlin

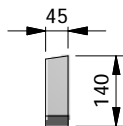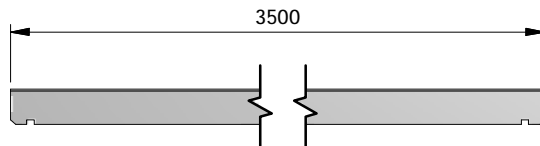



XN28.3500.70.70.0.C12

1 of required
Top wall log

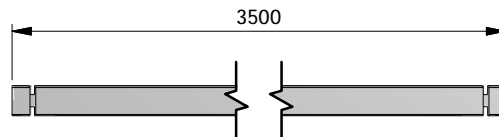



XN28.3500.70.70.0.C8

1 of required
Top wall log

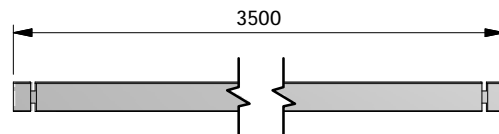

ZN.900.C15



2 of required
Fascia board



Casare 35/25 (28mm) - Components



F.830

40 of required
Roof Board

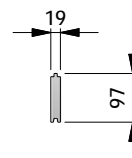



F.1830

40 of required
Roof Board

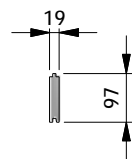



F.2270

38 of required
Floor Board
(Inc. one spare)

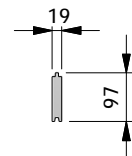



ZN.1900.C10

2 of required
Fascia Board

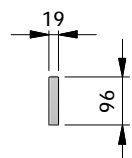



AP.28.2500.A

2 of required
Apex

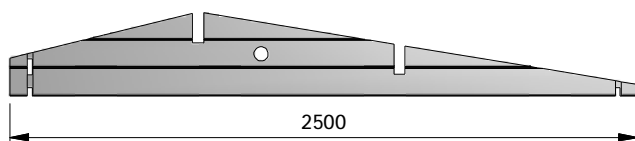

Z.195.A

2 of required
Trapezoid

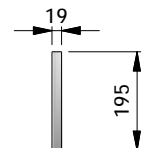

E9 Double Door

1 of required



E9 Window


1 of required



ACCESSORIES	
ITEM	QTY
20mm screws for vents	9
35mm screws for securing door to first 3 wall logs, SMB brackets, wind braces, roof edge reinforcements, apex trims, eaves edging and trapezoid	165
50mm screws for fascias and double bearers	40
55mm screws for floor trims	25
70mm screws for first full logs, door frame and purlins	30
M6 x 60mm bolts and nuts for storm braces	8
M6 x 25mm washers for storm braces	16
40mm nails for floor and roof boards	490
SMB075 (28mm) Interlocking Window to Log Connecting Bracket	8
SMB077 (28mm) Interlocking Door to Log Connecting Bracket	16
Door handle set and accessories	1
Window handle set and accessories	1
Set of vents	2
Generic Assembly Instructions for Log Cabins	1


Bearer Layout for Carsare 35/25 (28mm)

We suggest preparing a minimum overall base dimension of 3560x2560mm

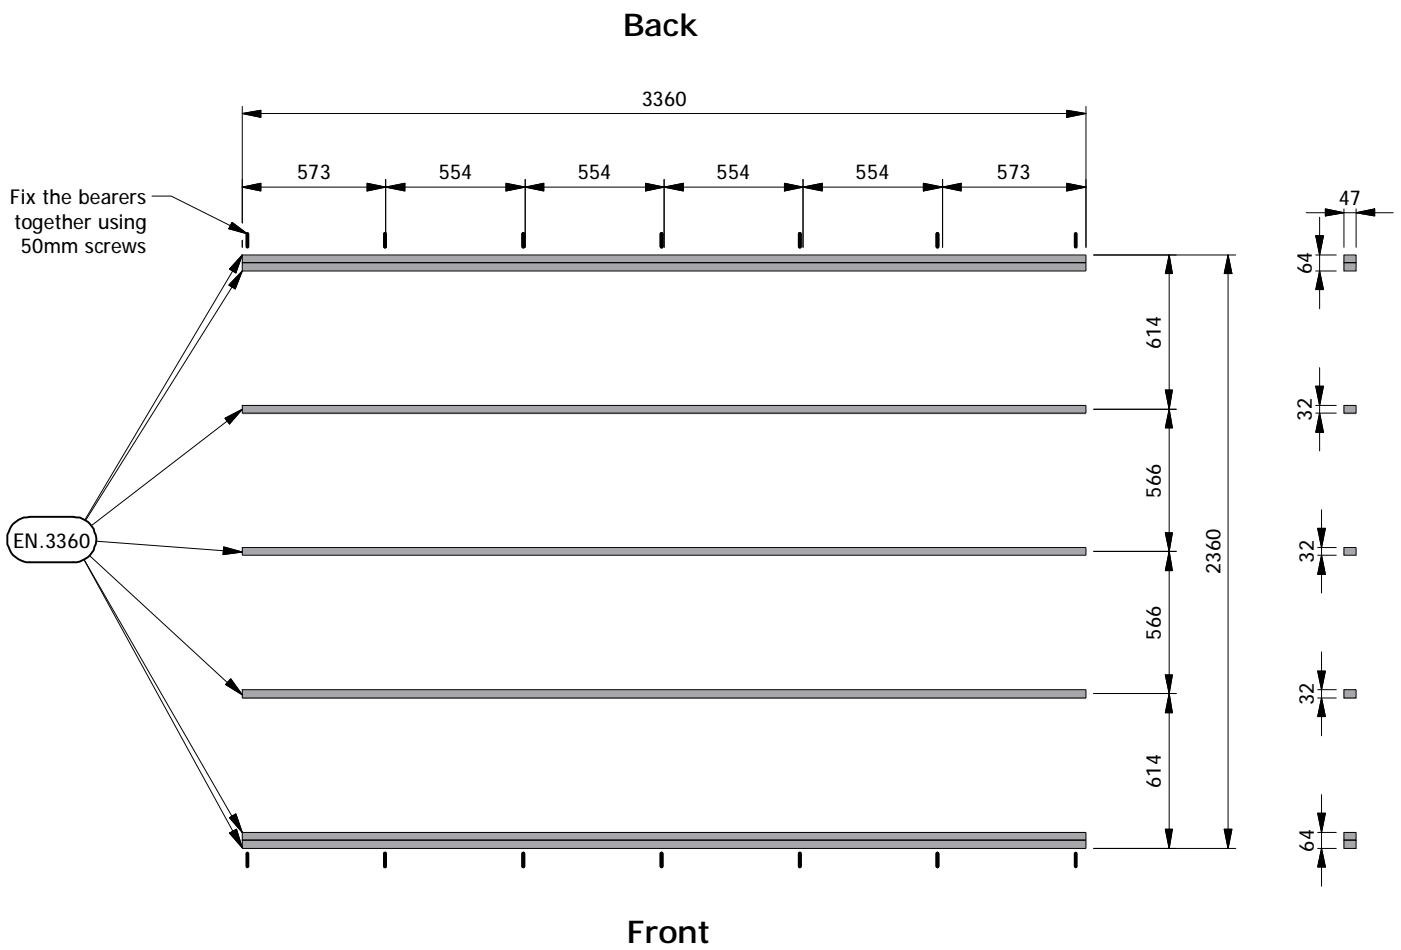


Wall Layout for Carsare 35/25 (28mm)


Front Wall

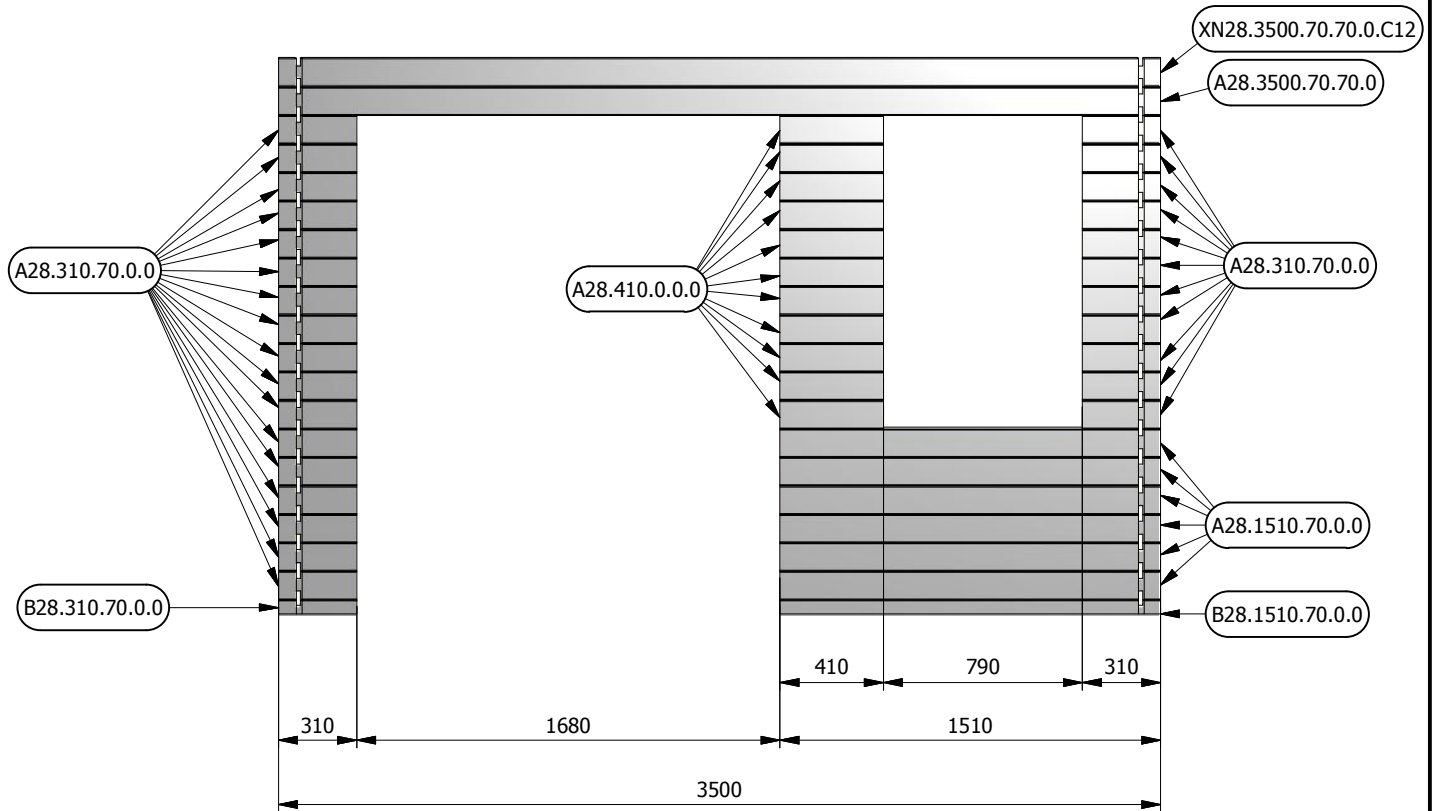


Rear Wall

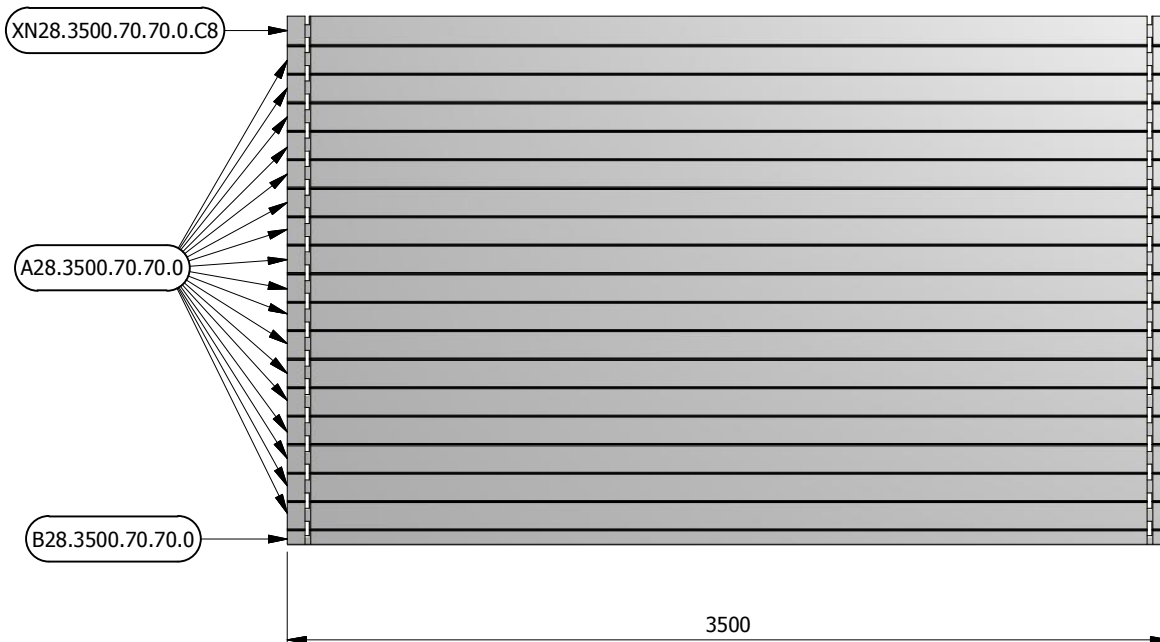


Right Side Wall

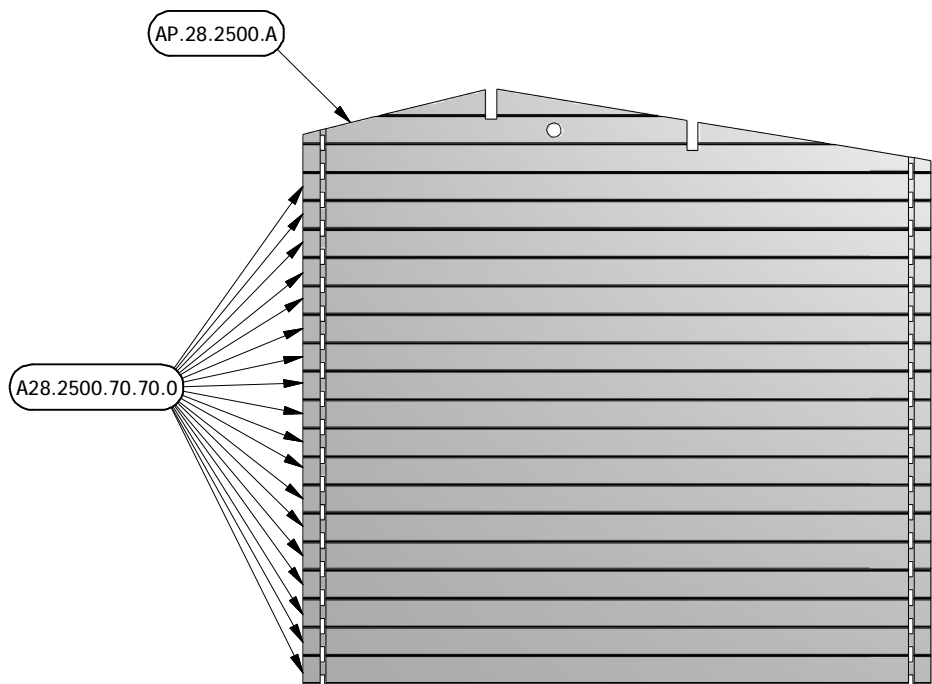

Left Side Wall

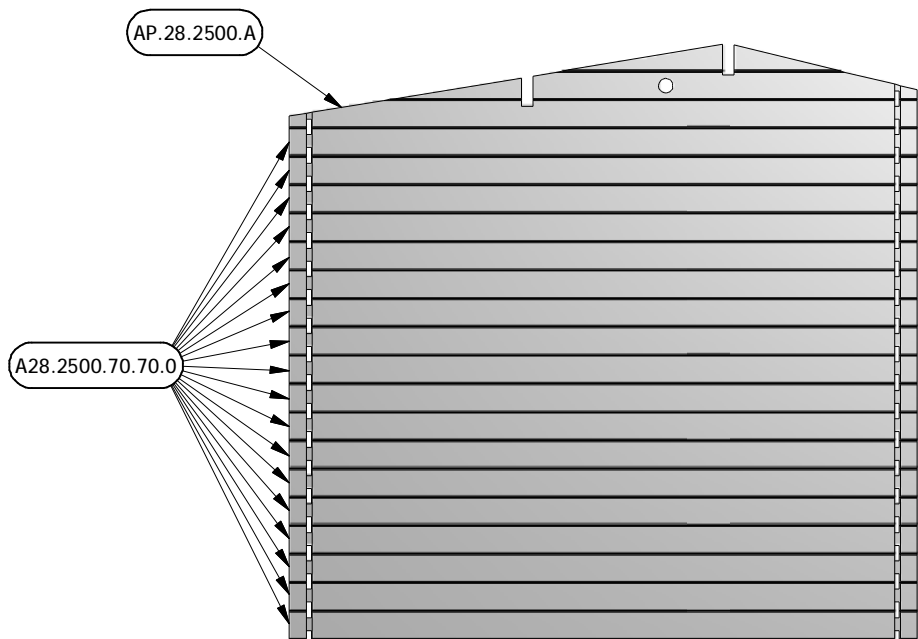


Purlin and Roof Installation for Carsare 35/25 (28mm)

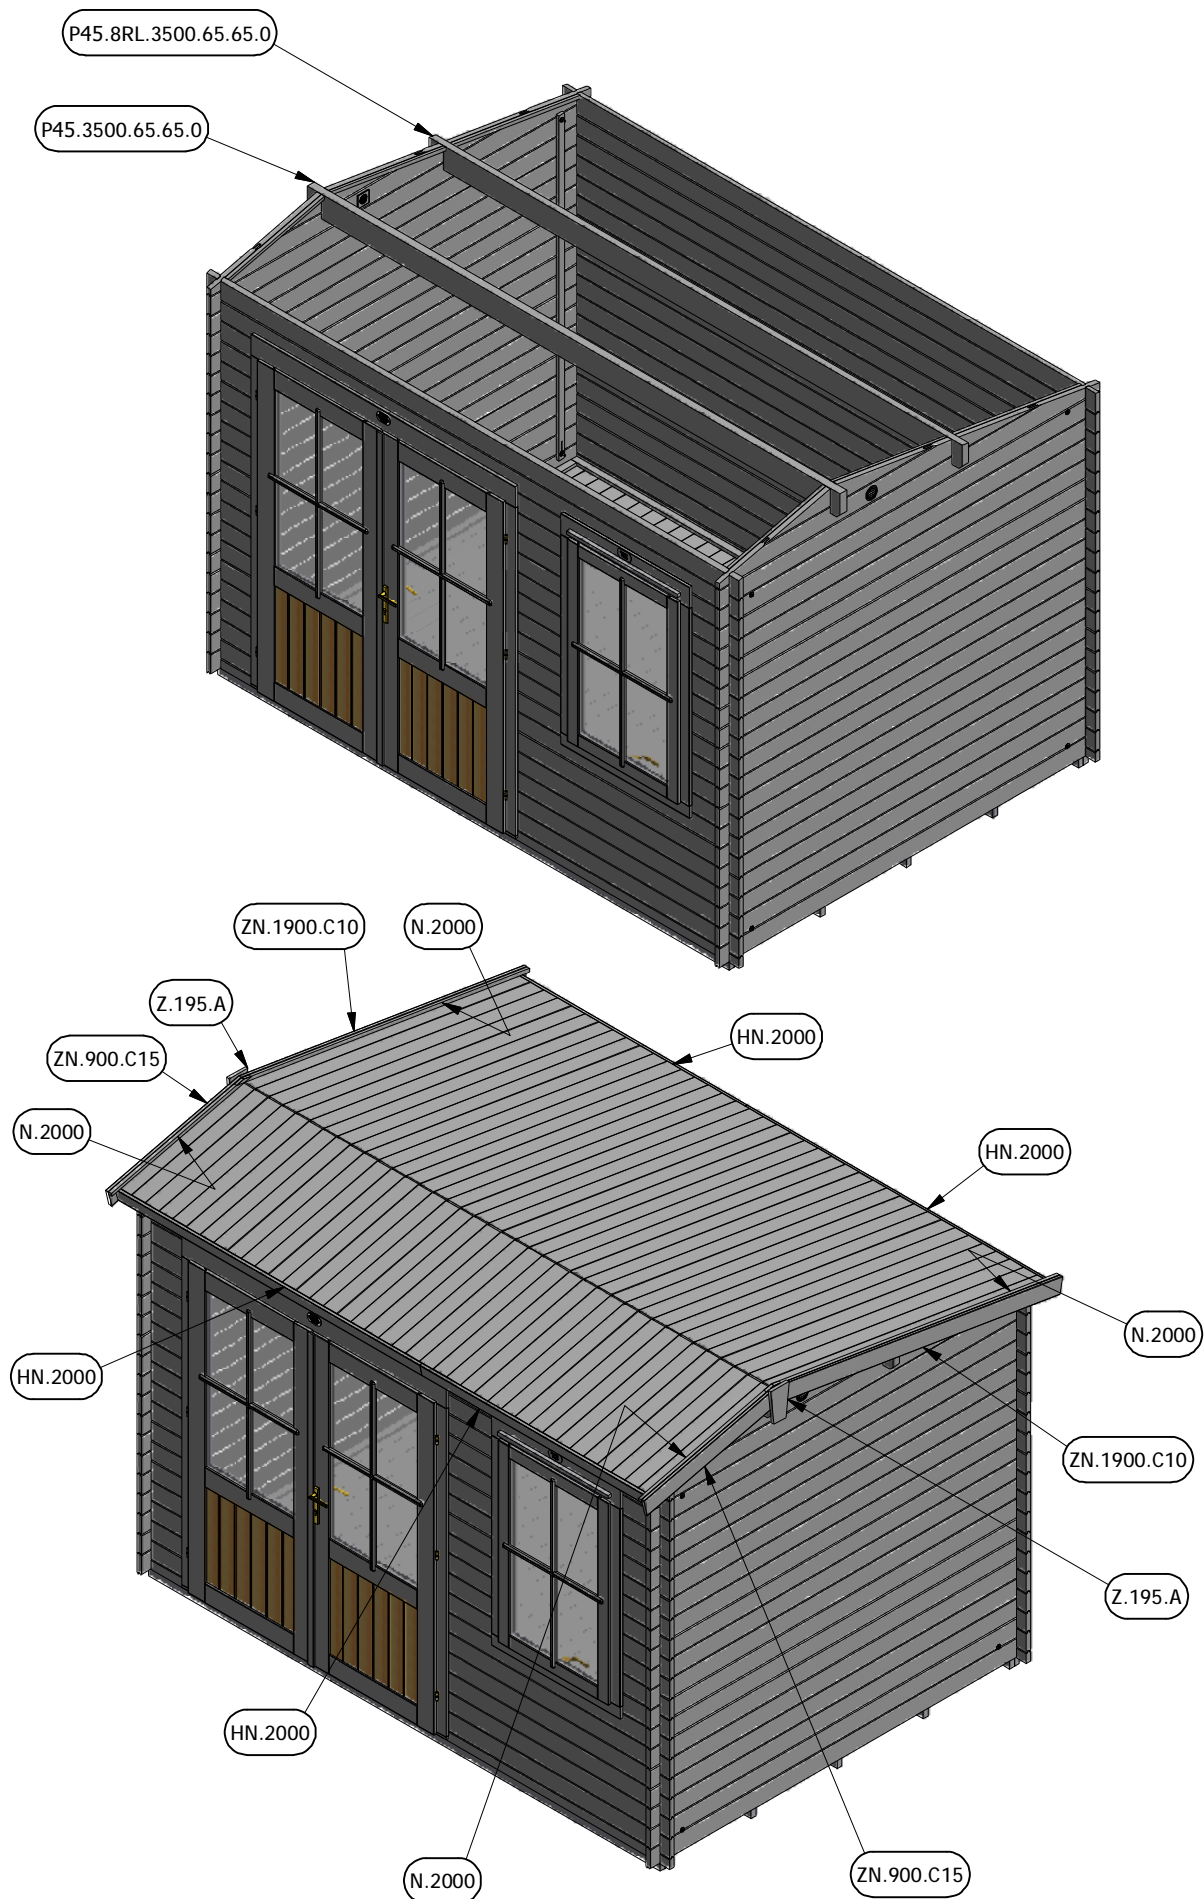

Roof Insulation Panel Layout for Premium Plus Carsare 35/25

Rear Elevation

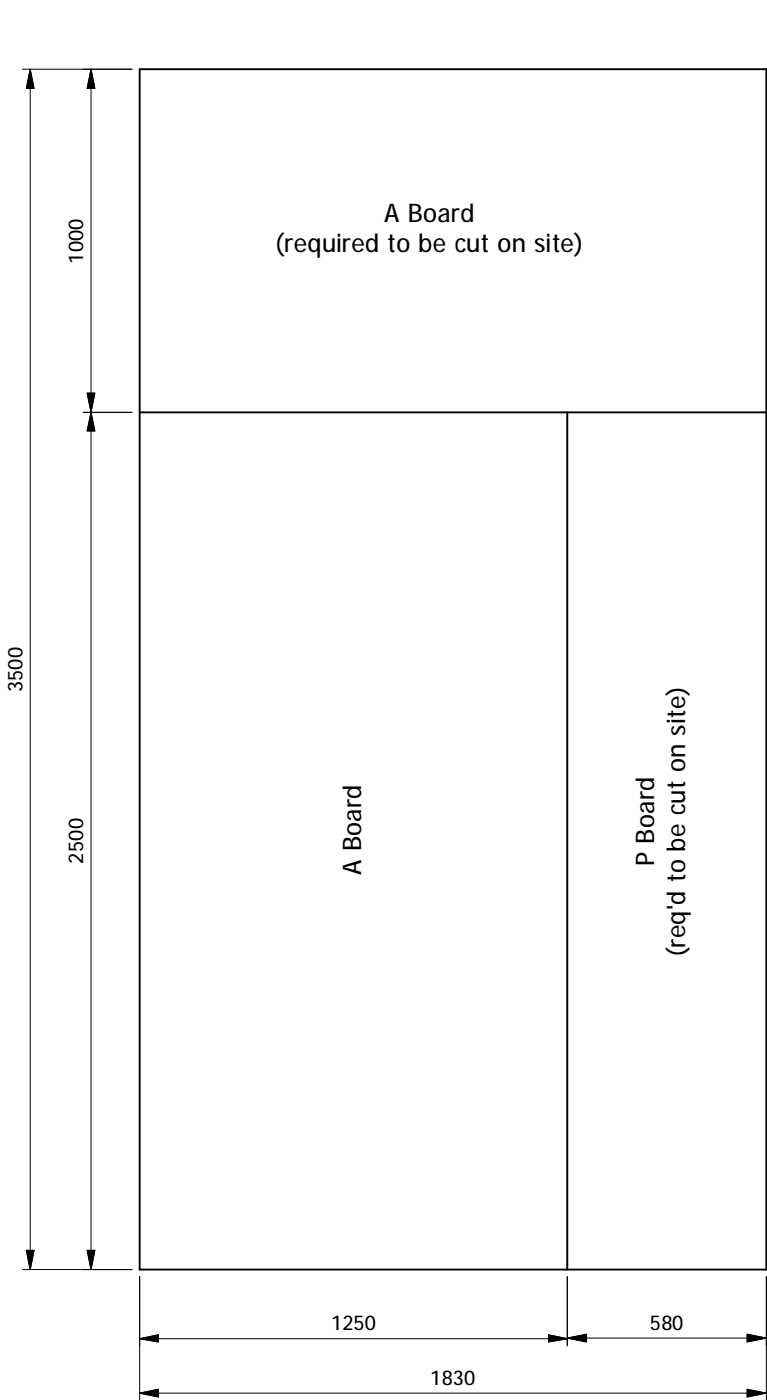

Front Elevation



INSULATION BOARDS	
Description	Qty
Panel A (1250x2500mm)	2
Panel P (625x1250mm)	1
Panel K (415x2500mm)	2

SCREWS AND METAL BRACKETS	
Description	Qty
Diameter 3x50mm Screws for roof insulation	90
Diameter 3x20mm Screws for metal brackets	50
Metal brackets	12